
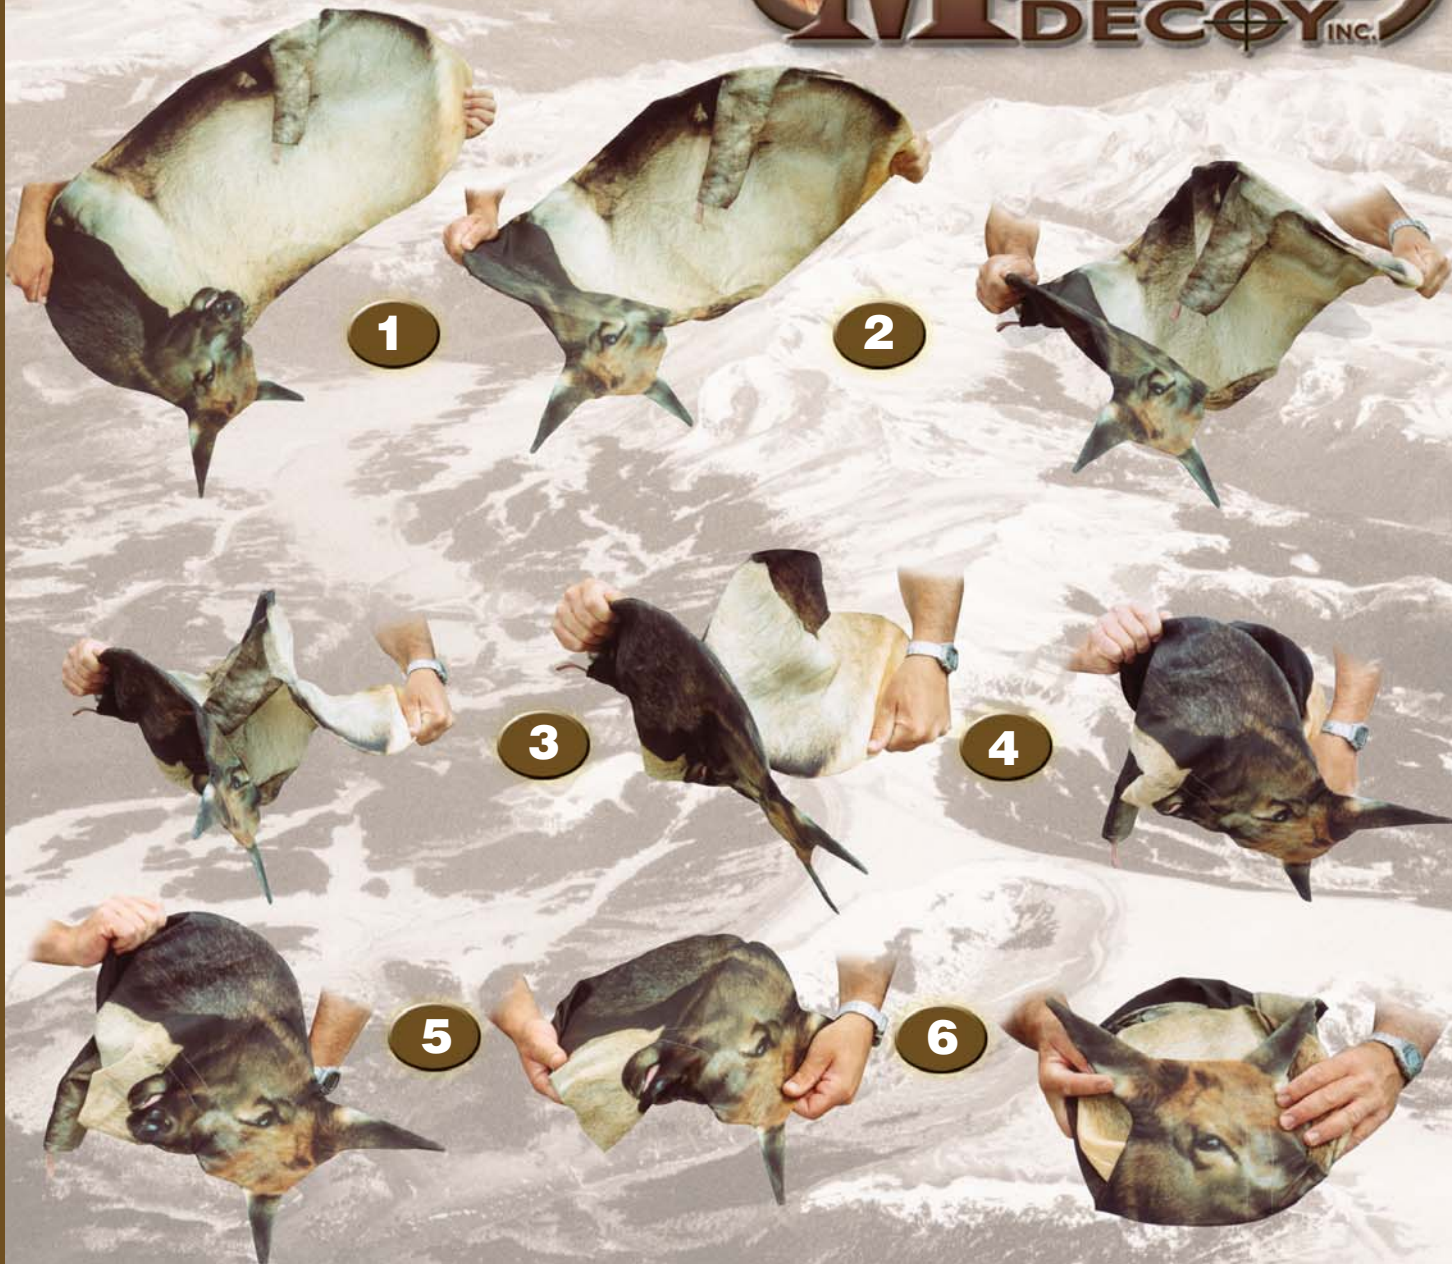


## how to fold your

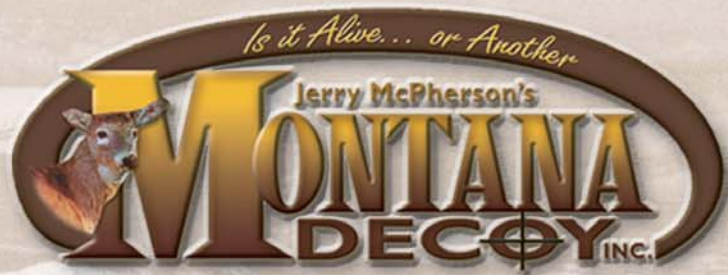

1. Start by holding the decoy vertically out away from your body with the head down.
2. Grab the decoy with one hand: thumb pointing up, and the other hand thumb pointing down as shown.
3. To start folding, twist the hand with the thumb pointing up forward and the hand with the thumb pointing down backward.
4. As you start the twisting motion push inward like an accordion, continue to twist and push, then cross your hands and bring the decoy into your body.
5. The band in the decoy will form three rings, use a rubber band to hold the decoy closed. (Tip: tie the rubber band to the elastic attached to the leg so you never lose it.)
6. Congratulations, you've folded the decoy.

Enclosed are two leg poles, insert both poles (opposite end of the metal stake) into a sleeve sewn inside the decoy. The sleeve opening is located in the bottom of each decoy leg. Slide the poles up into the sleeve and hook the elastic strip into the adjustable pole clip. Step the pole stakes into the ground and you're set up. (Tip: for a quick set up, tie a fish line loop at the top of the decoy and you can hang it on a limb without the leg poles.)

We would love to have your success stories and pictures with our decoys, or even videos. You can send them to:

### Montana Decoy, Inc.

Jerry McPherson  
P.O. Box 2377 • 2690 Wagoneer Drive  
Colstrip, Montana 59323  
email: [jmcphers@montanadecoy.com](mailto:jmcphers@montanadecoy.com)  
Check out our web site at [www.montanadecoy.com](http://www.montanadecoy.com)  
Phone: 406-748-3092



## ! CAUTION

The Montana Decoy looks so real that all precautions must be taken during archery season. Animals tend to be aggressive during the rut. Also, another hunter might mistake the decoy for the REAL THING! DO NOT USE the MONTANA DECOY during rifle season.